



Mineralized Filtration System

Countertop Series: 500/501 (Ceramic)

Countertop Series: 506/600/601 (Disruptor)

Undercounter: Model 901 (Disruptor)

Assembly & Operations Instructions [Manual]

(Please thoroughly review the manual's content before proceeding)



Introduction

Thank you for choosing the AVAVA Disruptor/Ceramic Integrated Water Filter Action System. This remarkable component has been engineered to provide water with nutrients. As this product has an immense array of features. We recommend you to read the contents of this manual before you set up the filter for use.

Avava Disruptor Comparison




Water Remediation Technologies

Contaminants To Be Removed	AVAVA Ahl Filter	RO	NF	UF	MF	Particulate Catridges	Carbon Block	Ultra Violet
Dissolved Salts		X						
Endotoxin	X	X	X	X	X	X		
Virus	X	X	X					X
Bacteria	X	X	X	X	X	X	X	X
Cysts	X	X	X	X	X	X	X	X
Polysaccharides (TEP)	X	X	X	X	X			
Colloids	X	X	X	X				
Particulates	X	X	X	X	X	X	X	
Chemical Reduction	X	X					X	X
Trace Pharmaceuticals	X	X					X	X

Membrane definition: Reverse Osmosis = RO, Nanofiltration = NF, Ultrafiltration = UF, Microfiltration = MF.

Specification of the Filter

	Ceramic Series	Disruptor Series
Model	500/501/901-C	506/600/601/901-D
Tap Water Pressure	1.5- 4.5 Bar / 22- 65 PSI	
Elimination Rate	Virus / Bacteria 99.99%	
Filter Materials	Ceramic	Non - Woven Media
Water Temperature	5 ~ 38° (41 ~ 100 °F)	
Filtration Flow Rate	2.5 ~ 3.5 Liters / Minute	
Filtration Capacity	+/- 5000 Liters / Approx 1 year	
*Based on your local water quality and environmental conditions.		

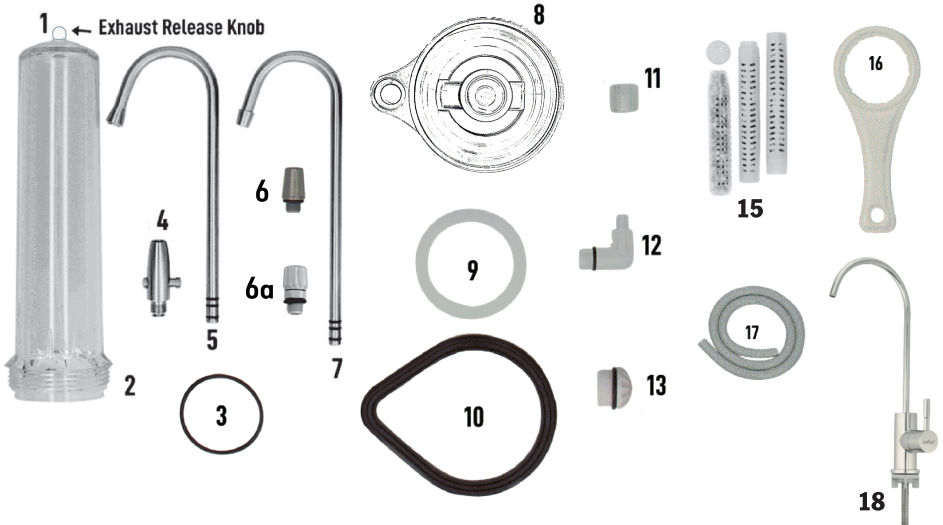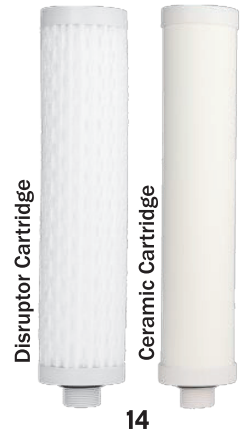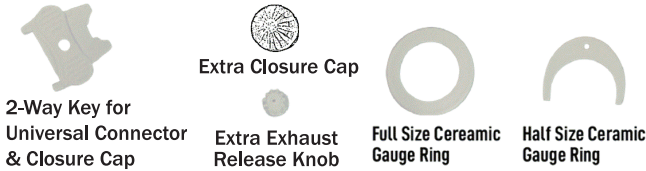

Anatomy of the System


- 1) Exhaust Release Knob
- 2) Filter Housing
- 3) Filter O-Ring
- 4) Switch Valve
- 5) Spout (Model - 600/601)
- 6) Outlet Fitting: 6 Countertop (500/501/506)
6a Undercounter (901)
- 7) Spout (Model - 500/501/506)
- 8) Base Member
- 9) Base Washer
- 10) Silicon Ring
- 11) Inlet Fitting Closure Cap
- 12) Inlet Fitting
- 13) Closure Cap
- 14) Disruptor/Ceramic Cartridge
- 15) Element Stick (Green - Model 800)
(Orange - Model 803)
- 16) Housing Opener
- 17) Hose 1.1mm for Countertop
Hose 2mm for Undercounter
- 18) Undercounter Faucet with Aerator
(Model 901)

Installation

1. Open the box of stick capsules.
(Make sure there are 4 pieces)
(Fig. 1)

* **Model: 800**
*Refill for Ionized
Magnesium Hydrogen Water*

* **Model: 803**
Refill for Alkaline Ion Water

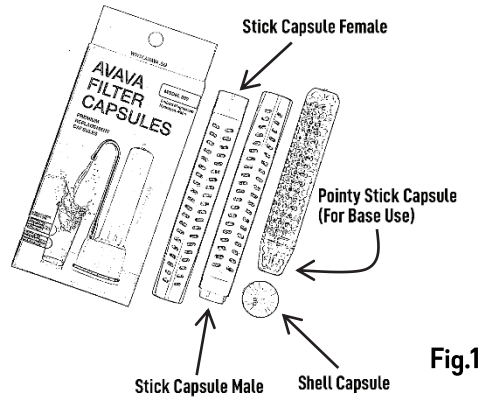

2. Unscrew the closure cap
using the 2 - Way Key.
(A-Side)
(Use table as support,
Tilt the base at 45° for
easier opening of cap)
(Fig. 2)

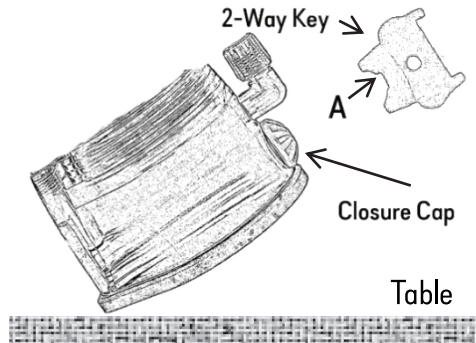


Fig.2

3. Insert the pointy stick
inside the base member.
Screw the closure cap
and tighten with the
2-Way Key. (Fig.2A)
(Tilt the base for easier
tightening of cap as above)

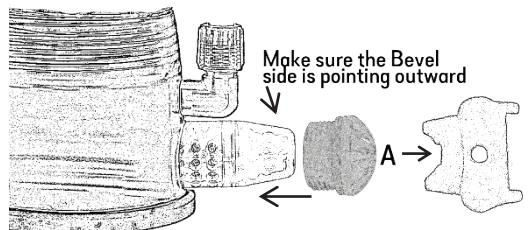


Fig.2A


NOTE: For Series No. 5, 6 & 9

4. Rotate the Filter Housing counterclockwise to unscrew it. Ensure that the Filter O-Ring is securely fastened at the bottom of the Filter Housing.

Fig.3

Verify that the base member contains base washer. Position the shell capsule in the center of the “Cavity,” ensuring the beveled side faces downward.

(Fig. 3)

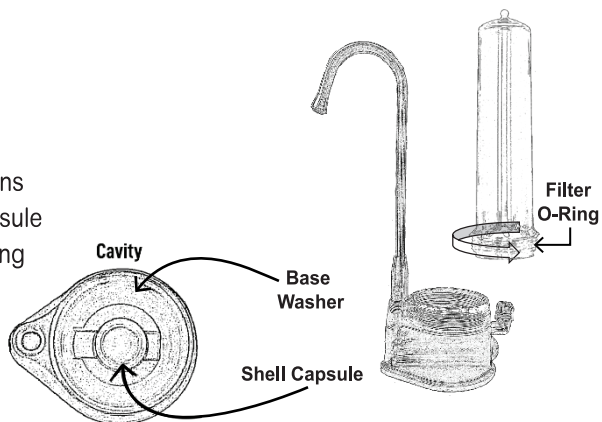

5. Take out the cartridge (Disruptor/Ceramic) from the box. Connect the male and female stick capsules and insert into the filter element cap. **(Fig. 4)**

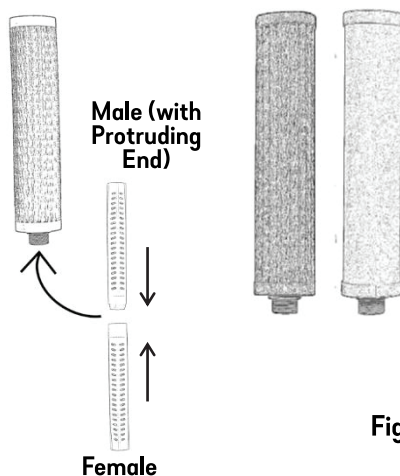


Fig.4

6. Screw the cartridge (Disruptor/Ceramic) back to the “Cavity”. **(Fig. 5)** Screw back the filter housing to the base member and tighten it to prevent water from leaking out of the housing.

NOTE : Try not to overtighten (Hand tighten only) the neck of the “Ceramic Cartridge”, if not, it will break.

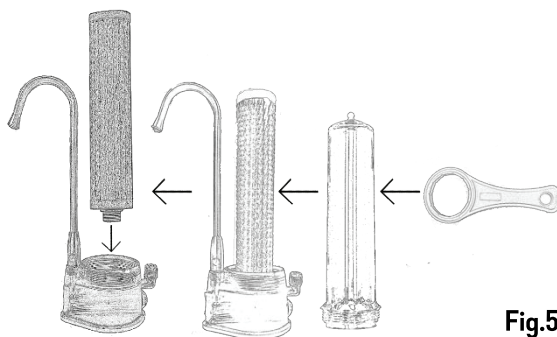


Fig.5

- 7.** Unscrew inlet fitting cap, thread in the cap through the hose (**Fig. A.1**), install the hose onto the inlet fitting and screw tightly with the inlet fitting cap. (**Fig. A.2**)

Fig.A.1


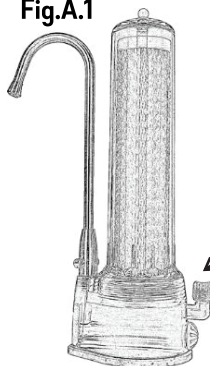



Fig.A.2

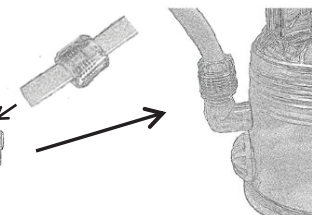

- 8.** Take out Closure cap (**Fig. B**).

Unscrew the aerator anti-clockwise from your tap. If your faucet (outer thread) is M22, install the 2-Way Valve with rubber washer to the faucet in a clockwise direction.


Fig.B

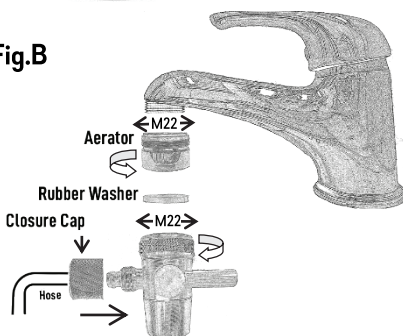

After completing the above steps, insert hose on the 2-Way Valve and screw tight with closure cap. (**Fig. B**)

- 9.** If faucet (Inner Thread) size is M24, use adaptor provided with rubber washer. If the thread is not enough, please use an existing rubber washer to fill up space. (**Fig. C**) (included Adaptor M24 to M22 Outside Thread)

Fig.C

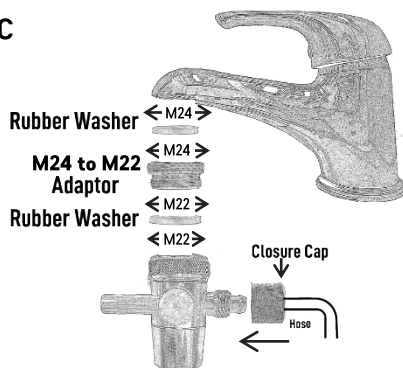

* For other sizes, please see optional adaptor. (**Fig. D**)

Fig.D

A (Outside Thread)

1. M22 to M22
2. M21 to M22
3. M20 to M22
4. M19 to M22
5. M18 to M22
6. M16 to M22

B (Inside Thread)

1. M24 to M22
2. M21 to M22
3. M20 to M22
4. M19 to M22
5. M18 to M22
6. M16 to M22

A. Outside Thread



B. Inside Thread



Operation of the System

Note: Please wash your hand first before assembling the Water Filtration System

Conditioning the Filter

Ensure the Exhaust Release Knob is loosen by turning Clockwise $\pm 180^\circ$ before filling up with water.

The filter unit should now be ready for first filling with water by runing on the Main Tap (**Fig.1**), followed by 2-Way Switch turning toward the Filter Direction 90° . (**Fig.2**)

When the Filter Housing is filled up with water, there will be excess water spurting out from Exhaust Release Knob. To seal up, turn it anti-clockwise $\pm 180^\circ$ (**Fig. 3**)

Quickly turn "OFF" the Main Tap, followed by 2-Way Switch. (**Fig. 2**)





After the faucet is turned off, water will still drip from the water outlet of the water filter due to the water filtering during the water inlet process. The air in the device is not entirely exhaust as part of the air was compressed on the top of the water filter. Thus, causing the water to surface out from the hole of the Exhaust Release Knob. The Exhaust Release Knob is equipped to release the excess air and water pressure. Gently rotate in the clockwise direction with fingers and stop at $\pm 180^\circ$ to release the air and water pressure. To Seal Up, gently tighten anti-clockwise $\pm 180^\circ$ or when water stop spurting out. (**Fig. 3**)

Note:

*When turning the Exhaust Release Knob and to avoid the screw from detaching off the casing threads, do not over loosen or rotate clockwise more than $\pm 180^\circ$ (**Fig.3**)*

Slide toward the thin side to turn "ON", purified water will then be dispensed through the faucet. (**Fig. 4**)
(Model 600/601)

Fig.1

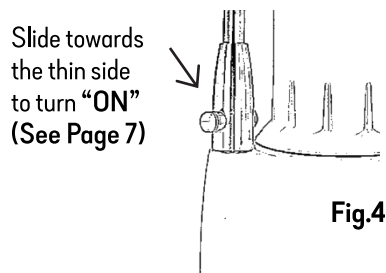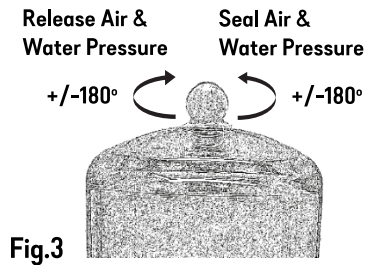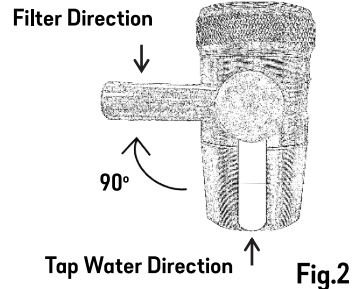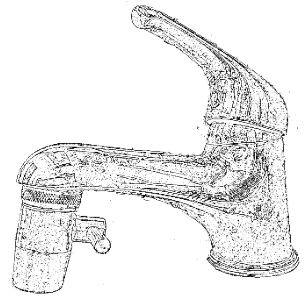

Allow the water to run for a minimum of 1-2 minutes or up to 3-8 liters (Disruptor/Ceramic) depending on condition of water.

After carrying out this procedure, the filter is now ready for use. If the water in the filter is not used for more than 48 hours, please flush away 500ml of water before use.

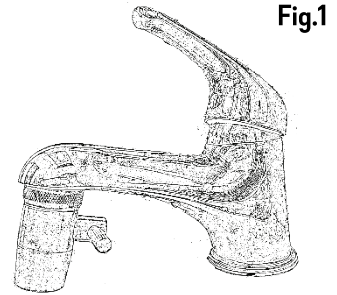


Fig.1

1. Turn on the tap. (Fig. 1)
2. Rotate the 2-Way Switch turning toward the Filter Direction 90°. (Fig. 2)
3. Slide the Switch Valve to "ON" (Fig.4) To dispense Purified Water.

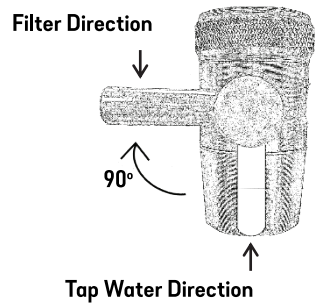


Fig.2

Note:

Do not be alarmed at times you might see the glass of water is slightly cloudy, this is due to the hydrogen bubbles in the water.

4. Reverse Step 3 to 1 to close/turn "OFF".

Single Groove = "ON"

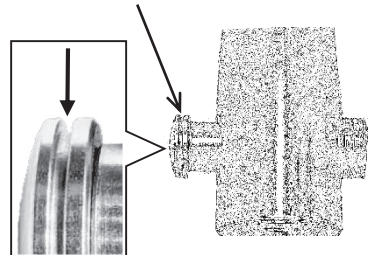


Fig.4

Note:

If there is water dripping after turning off the tap, it means that there is extra air in the housing. Turn on the tap at a low flow of water so that the excess air can be released by turning the release knob in a clockwise direction. (Fig. 3)

Double Groove = "OFF"

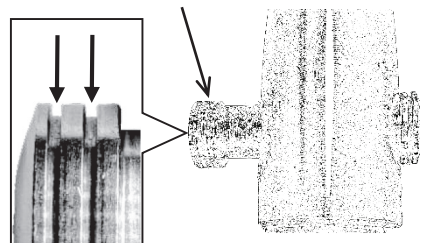


Fig.4A

Countertop Series

1. Turn on the tap. **(Fig. 1)**
2. Rotate the 2-Way Switch turning towards the Filter Direction 90°. **(Fig. 2)**
3. Purified water will dispense through the faucet.
4. Reverse Step 2 to 1 to close/turn "OFF".

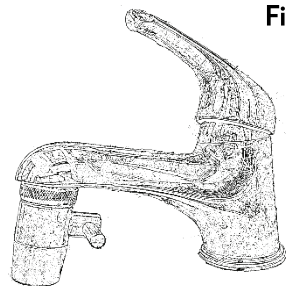


Fig.1

Servicing the Filter (Fig. 5)

When the water flow starts to slow down, it is time to replace the Disruptor cartridge with a new one. As for the ceramic cartridge, it is time to clean its surface.

1. Release air and water pressure by turning Exhaust Release Knob +/-180° clockwise followed by unscrewing the housing and Disruptor/Ceramic cartridge.
2. Clean the surface of the Ceramic cartridge up and down with a scouring pad or a brush. Use the cartridge Cylinder Ring gauge provided to check when to discard the cartridge. Discard cartridge if it goes through the Ring Gauge.

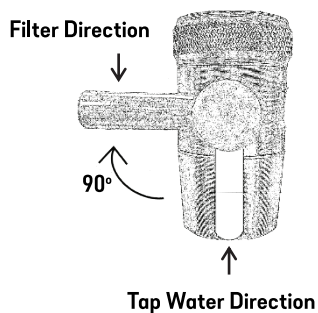


Fig.2

Gently brush/clean away the residues under cold running water and **DO NOT** use any detergent

Note: Refer Page 6, Condition the Filter.

- * We recommend replacing disruptor /ceramic cartridge every 6 months or after filtering 5000 liters of water whichever comes first.

However, the frequency may vary based on your local water quality and environmental conditions.

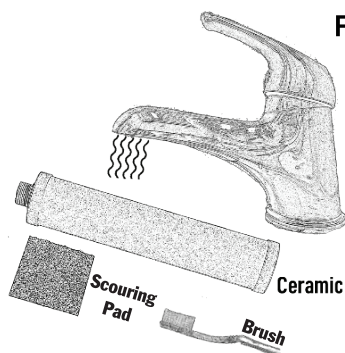


Fig.5

INSTRUCTIONS FOR USING THE AVAVA FILTER CAPSULE

For Models 800 and 803

- Using the tools provided with the AVAVA water filter, gently loosen the water-tight housing.
- Replace the complete set of AVAVA Filter Capsules.
(Do not use a mixture of old and new capsules).
- Carefully tighten the water - tight housing to complete.
- * We recommend replacing the AVAVA FILTER STICK CAPSULES every 1-2 months or 100L.

For Models 700-MX

- Insert the AVAVA STICK- CAPSULE into your Plastic or Aluminum purified water bottle and fill it up to 90%.
- Cap tightly and shake for 5 seconds. Allow water to stand in bottle for at least 15 minutes and enjoy!
(A single stick is sufficient for enriching 500ml of water in 15 Minutes.)
- After consumption, promptly refill water bottle leaving as little air as possible like in Step 1.
- * We recommend replacing the AVAVA STICK-CAPSULE every 1-2 months or 30L per Stick Capsule.

Note:

- Use the stick in purified water and not in juice, tea, coffee, etc.
- Amount of Hydrogen produced varies with the temperature and quality of the water.
- When used it in bottled water for a long period, please remove the cap occasionally to release hydrogen.
- Even if there are no more visible bubbles, there are still micro hydrogen bubbles produced which are not visible. The estimated period of usage is 1-2 months.
- When finished, you may dispose of the ceramic balls from the stick capsule by putting it in the flowerpot or garden. It will decompose by micro-organism and become mineral nourishment.

For Filtration System Application



AVD-101 Disruptor Cartridge



AVC-103 Ceramic Cartridge

For System Application



Model 803 Ion Alkaline Water (100L)

SGS

***Friendly Reminder:** Please check the cartridge and stick elements every 3 to 6 month to ensure optimal performance.

Each day, we insert the AVAVA Model 700-MX/800 stick into a 500 ml portable bottle or cup filled with purified water, which has a secure cover. Over the course of two months, we will measure hydrogen concentration using a meter ranging from +/- 1400 to 300 ppb. For optimal results, we suggest replacing the Model 700-MX every 1 - 2 months or after processing 30L per stick. For the Model 800/803 used in the system, we recommend replacement every 1 - 2 months or after processing 100L to ensure optimal results.

For use with Portable Bottles



Model 700 - MX
Magnesium Mineralized Water (30L)
(Please only insert one stick)



+/- 1400ppb

For System Application



Model 800 Ionized Magnesium
Hydrogen Water (100L)

READ BEFORE USE

Before use, please rinse off the excess ceramic powder out of the stick before putting it into purified water bottle.

Remark: For the Model 700-MX/800, the timing of capsule replacement depends on usage, so please change it as needed to achieve optimal results.

Warranty Information

- **One-Year Warranty:** Coverage starts from the date of purchase, protecting against natural wear and tear under normal usage conditions.
- **Exclusions:** This warranty does not cover damages resulting from improper handling, misuse, negligence, accidents, vandalism, environmental factors, or unauthorized modifications.
- **Important:** Please retain your purchase receipt for warranty claims and future maintenance.

Installation Services and Costs

1. Countertop Installation for Standard Faucet – SGD 60⁰⁰

One-Time Installation Service Includes:

- Delivery of the complete system to your location for installation.
- Connection of the appropriate adapter to your faucet (any incompatible adapters will be returned).
- Installation of the Countertop Drinking Water Purifier, ready to provide clean, enriched water.

2. Undercounter Installation for Standard Pipe and Connection – SGD 120⁰⁰

(Includes standard accessories only)

Note: Additional charges may apply for modifications to the faucet or existing piping. A separate quotation will be provided if necessary.

One-Time Installation Service Includes:

- Delivery of the complete system to your location for installation.
- Drilling a hole in your countertop surface (e.g., maple, solid surface, wood, quartz, etc.).
- Installation of the AVAVA Superior Pillar Faucet into your sink or countertop.
- Making all necessary connections to ensure optimal system performance.

3. Maintenance Service for Cartridge/Capsules Replacement – SGD 60⁰⁰

One-Time Maintenance Service (Excludes parts/accessories) Includes:

- Cleaning and maintaining the system housing.
- Replacement of the filter cartridge and Ionized Magnesium/Alkaline Ion Elements Capsules.
- Flushing and installing the new cartridges and capsules.

Remarks

After installation or maintenance, please run the system for at least 1-2 minutes (or up to 3-8 liters, depending on water quality and system type) to flush out any residual water before you begin using the system for clean, enriched water.

** Product specifications and pricing are subject to change without prior notice. The manufacturer reserves the right of final decision.*

Instructions for the Exhaust Release Knob



Universal Filter Connectors for Other Cartridges (Optional)



1/4 BSP



M15



M12



15mm



M14



17mm

STAN-IN PRIVATE LIMITED

Operation Hours:

Monday – Friday 9:00 -5:00 pm

Public Holiday / Saturday & Sunday: OFF



www.avava.sg



info@avava.sg



+65 8690 5070

Enquiry
Hotline

Singapore
01 May 2025